EMERGENCY BUTTON



Code MOECCO08681

BETWEEN HUMAN AND TECHNOLOGY



Benefit: EMERGENCY BUTTON is a red backlit switch that must be installed in an easily accessible part of the padded.

This product has two functions:

1. Emergency situation

If the button has been installed in an easily accessible position in an emergency situation, simply press the button and the movement of the padded will stop immediately by turning off the red light on the button (Power Off).

2. Energy saving

This switch is also recommended for energy saving, when the chair is not used, just press the red backlit button to disconnect the power (on the button will turn off the red light). This saves battery power, in case of prolonged disuse.

Technical specifications: Working voltage 29V