
 

 

 

 

 

 

 

 

 

 




WIRED	Description	Remote control CODE	Control box CODE
	 <p>TWO BUTTONS 1: Relax position opening 2: Relax position closing</p>	MOECCOS2822	EKOLOGIC according to the functions required
	 <p>TWO BUTTONS 1: Actuator 1 opening 2: Actuator 1 closing</p>	MOECCOS5425	EKOLOGIC according to the functions required
	 <p>FOUR BUTTONS 1: Relax position opening 2: Relax position closing 3: Headrest opening 4: Headrest closing</p>	MOECCOS2823	EKOLOGIC according to the functions required
	 <p>FOUR BUTTONS 1: Actuator 1 opening 2: Actuator 1 closing 3: Actuator 2 opening 4: Actuator 2 closing</p>	MOECCOS5426	EKOLOGIC according to the functions required

WIRELESS	Description	Remote control CODE	Control box CODE
	 <p>TWO BUTTONS 1: Relax position opening 2: Relax position closing</p>	MOKWCO5419-VO1	EKOLOGIC WIRELESS according to the functions required
	 <p>TWO BUTTONS 1: Actuator 1 opening 2: Actuator 1 closing</p>	MOKWCO5424-VO1	EKOLOGIC WIRELESS according to the functions required
	 <p>TWO BUTTONS 1: Headrest opening 2: Headrest closing</p>	MOKWCO07333VA	EKOLOGIC WIRELESS according to the functions required
	 <p>FOUR BUTTONS 1: Relax position opening 2: Relax position closing 3: Headrest opening 4: Headrest closing</p>	MOKWCO5166-VO1	EKOLOGIC WIRELESS according to the functions required

WIRELESS	Description	Remote control CODE	Control box CODE
	 <p>FOUR BUTTONS 1: Footrest closing, lift function 2: Footrest opening 3: Backrest opening 4: Backrest closing</p>	MOKWCO06546VA	EKOLOGIC WIRELESS according to the functions required
	 <p>FOUR BUTTONS 1: Actuator 1 opening 2: Actuator 1 closing 3: Actuator 2 opening 4: Actuator 2 closing</p>	MOKWCO5418-VO1	EKOLOGIC WIRELESS according to the functions required
	 <p>FOUR BUTTONS 1: Actuator 1 opening 2: Actuator 2 opening 3: Actuator 1 closing 4: Actuator 2 closing</p>	MOKWCO6681VA	EKOLOGIC WIRELESS according to the functions required
	 <p>FOUR BUTTONS 1: Turn on vibro units 2: Turn on vibro units 3: Speed decrease 4: Speed increase</p>	PR08487-S01	EKOLOGIC WIRELESS according to the functions required

WIRELESS	Description	Remote control CODE	Control box CODE
	 <p>TWO BUTTONS 1: Actuator 1 opening 2: Actuator 1 closing</p>	MOKWCO09136	EKOLOGIC WIRELESS according to the functions required
	 <p>FOUR BUTTONS 1: Actuator 1 opening 2: Actuator 1 closing 3: Actuator 2 opening 4: Actuator 2 closing</p>	MOKWCO08593	EKOLOGIC WIRELESS according to the functions required
Ability to customize features to suit your various needs			

OPTIONAL	Description	CODE
	USB type C charger cable <i>(available colors: white, black)</i>	MOPC07917 <i>(White)</i>
		MOPC07991 <i>(Black)</i>
	USB wall charger	MOPS07916
Available only for WIRELESS version		

