CINEMÀ



Description	Remote control CODE	Control box CODE
TWO BUTTONS 1: Footrest opening 2: Footrest closing	MOECCOS08724	EKOLOGIC according to the functions required
THREE BUTTONS 1: Footrest opening 2: Footrest closing 3: Heat	MOECCOS08725	EKOLOGIC according to the functions required
FOUR BUTTONS 1: Footrest opening 2: Footrest closing 3: Headrest opening 4: Headrest closing	MOECCOS08726	EKOLOGIC according to the functions required
FIVE BUTTONS 1: Footrest opening 2: Footrest closing 3: Headrest opening 4: Headrest closing 5: Heat	MOECCOS08603	EKOLOGIC according to the functions required

Description	Remote control CODE	Control box CODE
SIX BUTTONS 1: Footrest opening 2: Footrest closing 3: Headrest opening 4: Headrest closing 5: Heat 6: Home	MOECCOS08419	EKOLOGIC according to the functions required
SEVEN BUTTONS 1: Footrest opening 2: Footrest closing 3: Backrest opening 4: Backrest closing 5: Heat 6: Home 7: USB Type C	MOECCOS08496	EKOLOGIC according to the functions required

ACCESSORIES	CODE Product
Housing for push-button panel	M08403-004-BN
Extension for connection remote control + USB power supply	MOPSCO08397
Extension for connection from remote control to control unit	MOECC008429

