DRIVER



WIRED	Description	CODE Remote control	CODE Control box
	FOUR BUTTONS 1: Backrest opening 2: Backrest closing 3: Footrest closing, lift function 4: Footrest opening	MOECCO08483	/
	FOUR BUTTONS 1: Opening 2: Closing 3: Opening 4: Closing	MOECCO08790	/
B B	FIVE BUTTONS 1: Backrest closing 2: Backrest opening 3: Footrest opening 4: Footrest closing 5:Home (closed position)	MOECCO08391	/
	SIX BUTTONS 1: 0 Gravity opening 2: 0 Gravity closing 3: Backrest opening 4: Backrest closing 5: Footrest closing, lift function 6: Footrest opening	MOECCO08466	/

WIRED	Description	CODE Remote control	CODE Control box
HOME	SEVEN BUTTONS 1: 0 Gravity opening 2: 0 Gravity closing 3: Backrest opening 4: Backrest closing 5: Footrest opening 6: Footrest closing 7: Home (closed position)	MOECCO08467	/
of or	EIGHT BUTTONS 1: Headrest closing 2: Headrest opening 3: Backrest opening 4: Backrest closing 5: Footrest closing, lift function 6: Footrest opening 7: Tilting opening 8: Tilting closing	MOECCO08395	/
1 second 2	NINE BUTTONS 1: Headrest closing 2: Headrest opening 3: Backrest opening 4: Backrest closing 5: Footrest closing, lift function 6: Footrest opening 7: Memory 1 8: Memory 2 9: Reset (closed position)	MOECCO07700	EKOLOGIC according to required functions
A CANAL SALES OF THE SALES OF T	NINE BUTTONS 1: Headrest closing 2: Headrest opening 3: Backrest opening 4: Backrest closing 5: Footrest closing, lift function 6: Footrest opening 7: Lumbar pressure 8: Release pressure 9: Home (closed position)	MOECCO08126	/
A V A V A V RESET	NINE BUTTONS 1: Actuator 1 opening 2: Actuator 1 closing 3: Actuator 2 opening 4: Actuator 2 closing 5: Actuator 3 opening 6: Actuator 3 closing 7: Actuator 4 opening 8: Actuator 4 closing 9: Reset (closed position)	MOECCO07954	EKOLOGIC according to required functions

WIRED	Description	CODE Remote control	CODE Control box
THOME	NINE BUTTONS 1: 0 Gravity opening 2: 0 Gravity closing 3: Backrest opening 4: Backrest closing 5: Footrest opening 6: Footrest closing 7: Lumbar sliding (back) 8: Lumbar sliding (forward) 9: Home (closed position)	MOECCO08468	/
HOME	NINE BUTTONS 1: 0 Gravity opening 2: 0 Gravity closing 3: Backrest opening 4: Backrest closing 5: Footrest closing, lift function 6: Footrest opening 7: Lumbar sliding (back) 8: Lumbar sliding (forward) 9: Home (closed position)	MOECCOS08471	EKOLOGIC according to required functions

WIRELESS	Description	CODE Remote control	CODE Control box
RESET RESET	NINE BUTTONS 1: Headrest closing 2: Headrest opening 3: Backrest opening 4: Backrest closing 5: Footrest closing, lift function 6: Footrest opening 7: Memory 1 8: Memory 2 9: Reset (closed position)	MOKWCO07595	EKOLOGIC according to required functions
A V A V RESET	NINE BUTTONS 1: Actuator 1 opening 2: Actuator 1 closing 3: Actuator 2 opening 4: Actuator 2 closing 5: Actuator 3 opening 6: Actuator 3 closing 7: Actuator 4 opening 8: Actuator 4 closing 9: Reset (closed position)	MOKWC007992	EKOLOGIC according to required functions
A V A V 1 may 2 RESET	NINE BUTTONS 1: Actuator 1 opening 2: Actuator 1 closing 3: Actuator 2 opening 4: Actuator 2 closing 5: Actuator 3 opening 6: Actuator 3 closing 7: Memory 1 8: Memory 2 9: Reset (closed position)	MOKWC008390	EKOLOGIC according to required functions
See See	NINE BUTTONS 1: Lift opening 2: Lift closing 3: Tilting opening 4: Tilting closing 5: Backrest opening 6: Backrest closing 7: Footrest opening 8: Footrest closing 9: Reset (closed position)	MOKWC008722	EKOLOGIC according to required functions

OPTIONAL	Description	Code
	RECHARGE WIRELESS	MOECCO07644
USB tipo C	USB type C charger cable (available colors: white, black)	MOPC07917 (White)
		MOPC07991 (Black)
	USB wall charger	MOPS07916
Available only for WIRELESS version		

