









Measures in mm

	Description	CODE Remote control
	M1 Elmec Left USB A + USB C (does not require a control unit)	MOECCO08988L
	M1 Elmec Right USB A + USB C (does not require a control unit)	MOECCO08988R
	M2 Elmec Left USB A + USB C + Home (does not require a control unit)	MOECCO08989L

	Description	CODE Remote control
	M2 Elmec Right USB A + USB C + Home (does not require a control unit)	MOECCO08989R
	M3 Eko USB A + USB C + Home	MOECCOS09063
	M4 Eko USB A + USB C +Home	MOECCOS08749

	Description	CODE Cover
	Cover	MOCO09161
	Counterplate	MOCO09428

