
 

 
 
 

 











 

 

 



 


WIRED	Description	CODE Remote control	CODE Control box
	 <p>TWO BUTTONS 1: Relax position opening 2: Relax position closing, lift function</p>	MOEC2978	/
	 <p>FOUR BUTTONS 1: Footrest opening 2: Footrest closing, lift function 3: Backrest opening 4: Backrest closing</p>	MOEC5296	/
	 <p>SIX BUTTONS 1: Footrest opening 2: Footrest closing, lift function 3: Backrest opening 4: Backrest closing 5: Dorsal opening 6: Dorsal closing</p>	MOECCO06487	MOECCO5473
		MOECCO8754	/
	 <p>EIGHT BUTTONS 1: Memory 2: Memory 3: Reset (closed position) 4: Mechanism lock system 5: Backrest opening 6: Backrest closing 7: Headrest opening 8: Headrest closing</p>	MOECCO5362	MOECCO2792


WIRED	Description	CODE Remote control	CODE Control box
	EIGHT BUTTONS 1: Memory 2: Warming 3: Reset (closed position) 4: Mechanism lock system 5: Relax position opening 6: Relax position closing 7: Headrest opening 8: Headrest closing	MOECCO5363	EKOLOGIC M3 DOUBLE ENCODER
	EIGHT BUTTONS 1: Memory 2: Warming 3: Reset (closed position) 4: Mechanism lock system 5: Footrest opening 6: Footrest closing, lift function 7: Backrest opening 8: Backrest closing	MOECCO5364	EKOLOGIC M3 DOUBLE ENCODER
	EIGHT BUTTONS 1: Memory 2: Memory 3: Reset (closed position) 4: Warming 5: Footrest opening 6: Footrest closing, lift function 7: Backrest opening 8: Backrest closing	MOECCO5366	EKOLOGIC M3 DOUBLE ENCODER
	EIGHT BUTTONS 1: Reset (closed position) 2: Mechanism lock system 3: Footrest opening 4: Footrest closing, lift function 5: Dorsal opening 6: Dorsal closing 7: Headrest opening 8: Headrest closing	MOECCO6176	MOECCO6114






WIRED	Description	CODE Remote control	CODE Control box
	EIGHT BUTTONS 1: Memory 2: Memory 3: Reset (closed position) 4: Massage 5: Footrest opening 6: Footrest closing 7: Backrest opening 8: Backrest closing	MOECCO06724	EKOLOGIC according to required functions
	SIX BUTTONS 1: Footrest opening 2: Footrest closing, lift function 3: Backrest opening 4: Backrest closing 5: HOME (closed position) 6: SOS	PR08223	/
	FOURTEEN BUTTONS 1: Vibro drive 1 2: Vibrating motion adjustment 3: Vibro drive 2 4: Changing vibrating sequence 5: Vibro drive 3 6: Switching off Vibro 7: Vibro drive 4 8: On/off heating pad 9: Vibro drive 5 10: Home (closed position) 11: Backrest opening 12: Backrest closing 13: Footboard opening 14: Footboard closing	MOECCOS09132	EKOLOGIC according to required functions
	FOURTEEN BUTTONS 1: Footrest opening 2: Footrest closing 3: Backrest opening 4: Backrest closing 5: Headrest opening 6: Headrest closing 7: Lift function 8: Lift closing 9: Tilting opening 10: Tilting closing 11: Wheel lift 12: Descent of wheels 13: HOME (closing position) 14: Safety lock mechanism	MOECCOS08689	EKOLOGIC according to required functions

WIRED	Description	CODE Remote control	CODE Control box
	TWELVE BUTTONS  <ul style="list-style-type: none"> 1: Footrest opening 2: Footrest closing 3: Backrest opening 4: Backrest closing 5: Lift function 6: Lift closing 7: Tilting opening 8: Tilting closing 9: Wheel lift 10: Descent of wheels 11: HOME (closing position) 12: Safety lock mechanism 	MOECCOS08974	EKOLOGIC according to required functions
	TEN BUTTONS  <ul style="list-style-type: none"> 1: Footrest opening 2: Footrest closing 3: Backrest opening 4: Backrest closing 5: Lift function 6: Lift closing 7: Tilting opening 8: Tilting closing 9: HOME (closing position) 10: Safety lock mechanism 	MOECCOS09293	EKOLOGIC according to required functions
	EIGHT BUTTONS  <ul style="list-style-type: none"> 1: Lift function 2: Lift closing 3: Tilting opening 4: Tilting closing 5: Backrest opening 6: Backrest closing 7: Footrest opening 8: Footrest closing 	MOECCO08764	/
	EIGHT BUTTONS  <ul style="list-style-type: none"> 1: Headrest closing 2: Headrest opening 3: Backrest opening 4: Backrest closing 5: Footrest closing, lift function 6: Footrest opening 7: Lumbar pressure 8: Release pressure 	MOECCO08348	/

WIRED	Description	CODE Remote control	CODE Control box
	 <p>DUE TASTI 1: Relax position closing 2: Relax position opening</p>	MOECCO09375	/
	 <p>QUATTRO TASTI 1: Relax position closing 2: Relax position opening 3: Headrest closing 4: Headrest opening</p>	MOECCO09376	/

WIRELESS	Description	CODE Remote control	CODE Control box
	 <p>SIX BUTTONS 1: Backrest opening 1 M1 2: Backrest closing 1 M1 3: Footrest opening 1 M2 4: Footrest closing 1 M2 5: Simultaneous opening 1/3 6: Simultaneous closing 2/4</p>	MOKWCO6054	EKOLOGIC WIRELESS according to required functions
	 <p>SIX BUTTONS 1: Mechanism lock system 2: Warming 3: Footrest opening 4: Footrest closing, lift function 5: Backrest opening 6: Backrest closing</p>	MOKWCO6155	EKOLOGIC WIRELESS according to required functions
	 <p>SIX BUTTONS 1: Footrest opening 2: Footrest closing, lift function 3: Backrest opening 4: Backrest closing 5: Dorsal opening 6: Dorsal closing</p>	MOKWCO06657	EKOLOGIC WIRELESS according to required functions
	 <p>SIX BUTTONS 1: Mechanism lock system 2: Massage 3: Footrest opening 4: Footrest closing, lift function 5: Backrest opening 6: Backrest closing</p>	MOKWCO06894-S01	MOKWCO06613-S03

	<p>EIGHT BUTTONS</p> <p>1: Memory 2: Memory 3: Reset (closed position) 4: Mechanism lock system 5: Backrest opening 6: Backrest closing 7: Headrest opening 8: Headrest closing</p>	<p>MOKWCO6156</p>	<p>EKOLOGIC WIRELESS according to required functions</p>
---	---	--------------------------	--

LEGEND	
<p>1 2</p>	<p>Memory: the memory button allows to save the ideal relax position, once it has been individuated. By simply pushing the button, the memory function will recall the saved seat position.</p>
	<p>Lock: if activated, the lock function prevent the mechanism to move in order to avoid accidents (especially in case of children or inexperienced user).</p>
	<p>Reset: if activated, the reset button allows to close all the components of the mechanism, regardless of the initial position.</p>
	<p>Heat: the button activates the heating of the seat, thanks to heating panels inside the upholstered seat.</p>
	<p>Lift: the lift button can be used to close the footrest/backrest of the mechanism and to help users with reduced mobility in standing up easily and safely.</p>
	<p>Massage: the massage button when activated, thanks to a slatted movement at progressive pressure and controlled speed it transmits to the user benefits to the muscular, skeletal, circulatory and mental apparatus.</p>
<p>HOME</p>	<p>HOME: the HOME button, when pressed, returns to the closing position the various components of the mechanics in whatever position they are located.</p>
<p>SOS</p>	<p>SOS: the SOS command when activated, emits a sound, while sending a message (previously chosen by the user) to the saved numbers. The numbers and message are configured via the app.</p>

